

iVIEW®

iVIEW-300PK

USER'S MANUAL



MULTI-FORMAT KARAOKE PLAYER


To assure the product to work in best status
Please read the users manual carefully before operation and keep it well for future use

TABLE OF CONTENTS

ABOUT THE PLAYER	1
REMOTE CONTROL	2
IMPORTANT SAFETY INSTRUCTIONS	3-6
PRECAUTIONS	7
NOTES ON DISCS	8
INSTRUCTIONS TO THE REMOTE CONTROL	9-10
REMOTE CONTROL OR PANEL KEYS FUNCTIONS	11-14
SYSTEM SETUP	15-30
HDMI CONNECTION	31
USB MODE /CARD MODE	32
SPECIFICATIONS	33

ABOUT THE PLAYER

 REAR PANEL INFORMATION

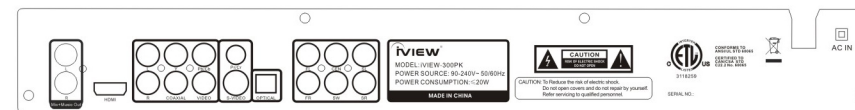

- | | |
|-------------------------------|----------------------|
| 1.Front left audio output | 8.Right audio output |
| 2.Front right audio output | 9.YUV video output |
| 3.Center audio output | 10.Coaxial output |
| 4.Subwoof audio output | 11.Video output |
| 5.Surround left audio output | 12.S-Video output |
| 6.Surround right audio output | 13.Optical output |
| 7.Left audio output | 14.Mic+Music Out |


FRONT PANEL INFORMATION



- | | | |
|------------------|---------------|----------------|
| 1.POWER | 7.ECHO | 13.PLAY/PAUSE |
| 2.DISC TRAY | 8.PREV | 14.DELAY |
| 3.MIC 1/2 | 9.VOCAL | 15.RECORD |
| 4.SD/MS/MMC CARD | 10.STOP | 16.VOLUME |
| 5.MIC VOL | 11.NEXT | 17.KEY CONTROL |
| 6.USB | 12.OPEN/CLOSE | 18.REV |
| | | 19.FWD |

REMOTE CONTROL

 Remote Control

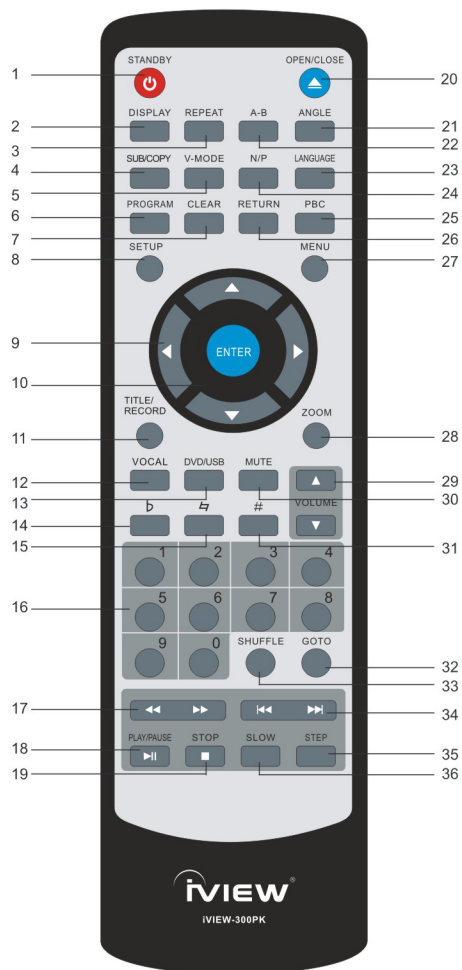

1. STANDBY
2. DISPLAY
3. REPEAT
4. SUB/COPY
5. V-MODE
6. PROGRAM
7. CLEAR
8. SETUP
9. UP DOWN LEFT RIGHT
10. ENTER
11. TITLE/RECORD
12. VOCAL
13. DVD/USB
14. b
15. b
16. NUMBER
17. REV/FWD
18. PLAY/PAUSE
19. STOP
20. OPEN/CLOSE
21. ANGLE
22. A-B
23. LANGUAGE
24. N/P
25. PBC
26. RETURN
27. MENU
28. ZOOM
29. VOLUME +/-
30. MUTE
31. #
32. GOTO
33. SHUFFLE
34. PREV/NEXT
35. STEP
36. SLOW

IMPORTANT SAFETY INSTRUCTIONS

Do not remove the cabinet cover , or you may be exposed to dangerous voltage.

This product should be operated only from the type of power source .

The product Should be Situated away from the heat source

Do not use this product near water.

Power-supply cords should be routed

The player is not used for a long period of time.

Never push objects of any kind in to this product through openings .

Do not use attachments not recommended by the product manufacturer

Do not place this product on an unstable place.

Keep your fingers well clear of the disc tray as it is closing.

Do not place a heavy object on or step on the product.

Unplug the product from outlet before Connection.

Do not remove the cabinet cover

Do not use acracked, deformed or repaired disc.

Unplug this product from the outlet

Do not attempt to service this product yourself

IMPORTANT SAFETY INSTRUCTIONS

Caution :

Please read And observe All warning And instructions given in this owners Manual and those marked on the unit. Retain this manual for Future reference. This set has been designed And Manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not Contain any parts that can be repaired by the User.

4 Do not remove the cabinet cover, or you may be exposed to Dangerous voltage. Refer servicing to qualified service personnel only.

Please read the owners Manual Carefully and follow all the operating and other instructions.

Power sources

This product should be operated only from the type of power source indicated on the marking label. for the usage of the battery power and Other power source, refer to the operating instructions.

Ventilation

Slots and opening in The cabinet Are provided for Ventilation and to ensure reliable operating of the product and to protect it from overheating, and

these openings must not be blocked or covered. This product should not be Placed on the bed or sofa.

Heat sources

The product Should be Situated away from the heat source such as radiators, heat registers, Stoves or other products that produce heat.

Water and moisture

Do not use this product near water. For example, near a bathtub, wash bowl, kitchen sink, or a damp basement etc.

Cleaning

Unplug this product from the outlet Before cleaning. Do not use liquid cleaner or aerosol cleaners. Use a damp cloth for cleaning.

Power-cord protection

Power-supply cords should be Routed so that they are not likely to be walked on or pinched by items placed upon or again them. Pay particular attention to cords at plug, convening, convenience receptacles and the point where they exit from the product.

Lightning

In order to prevent from the damage caused by storm or the player is not used for a long period of time, pull out the plug from the outlet.

Object and liquid entry

Never push objects of any kind in to this product through openings in Order to prevent from a fire or electric shock.

IMPORTANT SAFETY INSTRUCTIONS

Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

Accessories

Do not place this product on An unstable place. The product may fall, causing serious personal injury, any mounting of the product should follow the manufacturers instructions, and should use a mounting accessory recommended by the manufacturer

Disc tray

Keep your fingers well clear of the disc tray as it is closing. Neglecting to do so may cause serious personal injury.

Burden

Do not place a heavy object on or step on the product. The object may fall, causing personal injury and damage to the product.

CONNECTION TO OTHER EQUIPMENT
Unplug the product from outlet before connection, otherwise, it may cause the serious personal Injury.

Laser

Do not remove the cabinet cover. Direct to laser may cause damage to eyesight.

Disc

Do not use a cracked, deformed or repaired disc. These discs are easily broken and may cause personal injury and the damage to the product.

Damage requiring service

Unplug this product from the outlet and refer servicing to qualified service personnel under the following

Conditions:

- a) When the power-supply cord or plug is damaged.
- b) If the objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating controls instructions, adjust Only those that are covered by the operating instructions as an Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or damaged in any way
- f) when the product is smoking or has an unpleasant smell. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Replacement parts

When replacement parts are required, be sure the service technician has used Replacement parts specified by

IMPORTANT SAFETY INSTRUCTIONS

the Manufacturer or have the same characteristics as the original part.

Unauthorized substitutions may result in fire, electric shock or other hazards.

Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

Special notice:

This manual is edited based on general description of all conditions, it may vary depending on different cases without prior notice.

PRECAUTIONS

NOTES ON HANDLING

1. When shipping the DVD video player, the original shipping carton and packing materials come in handy.

For maximum protection, repack the unit as it was originally packed at the factory.

2. Do not use volatile liquids, such as insect spray, near the DVD video player for a long time. They will leave marks on the finish.

3. The top and rear panels of the DVD video player may become warm after a period of use. This is not a malfunction.

4. When the DVD video player is not in use, be sure to remove the disc and turn off the power.

5. If you do not use the DVD Video player for a long period of time, the unit may not function properly in the future. Turn on and use the DVD video player occasionally.

Notes on locating

When you place this DVD video player near a TV, radio, or VCR, the playback picture may become poor and the sounds may be distorted. In this case, place the DVD video player away from the TV, radio or VCR.

Notes on cleaning

Use a soft, dry cloth for cleaning.

1. For stubborn dirt, soak the cloth in a weak detergent solution, wring well and wipe. Use a dry cloth to wipe dry. Do not use any type of solvent, such as thinner and benzene, as they may damage the

surface of the DVD video player.

2. If you use a chemical saturated cloth to clean the unit, follow that product's instructions.

Warning

Cleaning and adjustment of the lens or other components should be done by the qualified personnel.

To obtain a clear picture, the DVD video player is high technology, precision device. If the optical pick-up

lens and drive parts are dirty or worn down, the picture quality becomes poor. To obtain a clear picture, we recommend regular inspection and maintenance (cleaning or parts replacement) every 1,000 hours of use depending on the operating environment.

NOTES ON DISCS

On handling discs

Do not touch the playback side of the disc. Do not attach paper or tape to discs.

On cleaning discs

Wipe the disc from the center outward with a soft cloth. Fingerprints and dust on the disc cause picture and sound deterioration. If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with slightly moistened soft cloth and finish with a dry cloth. Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. It may damage the disc.

On storing discs

Do not store discs in places subject to moisture and dust such as a bathroom or near a humidifier.

Store discs vertically in case.

Do not store discs in a place subject to sunlight or near heat sources.

About the Owners manual

 
This owners Manual explains the basic instructions of this DVD video player. When the functions of some DVD video players are not mentioned or instructed, please refer to instruction notes of discs or follow the procedure prompted on the TV screen.

INSTRUCTIONS TO THE REMOTE CONTROL

PREPARATION OF REMOTE CONTROL


At first, place the batteries into the remote control, then you can use remote control to operate the DVD video player.

1. Open the cover

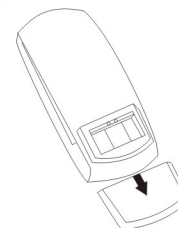


2. Insert the batteries (No. AAA)

 Make sure to match the + and - on the batteries to the marks inside the battery compartment.

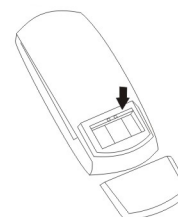

 3. Close the cover

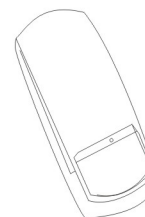

Note on the batteries
Improper use of the batteries may cause battery leakage and corrosion. To operate the remote control correctly, follow the instructions below.

1. Do not insert batteries into the remote control in the wrong direction.

2. Do not charge, heat, open or short-circuit the batteries. Do not throw batteries into a fire.

3. Do not leave dead or exhausted batteries in the remote control.

4. Do not use different types of batteries together or mix old and new batteries.

 
5. If you do not use the remote control for a long period of time, remove the batteries to avoid possible damage from battery corrosion.

6. If the remote control does not function correctly or the operating range becomes reduced, replace all batteries with new ones.

7. If battery leakage occurs, wipe the battery liquid from the battery compartment, then insert new batteries.

The batteries can be used for one year in normal condition.

Operation of the remote control This is for instructions how to use the remote control.

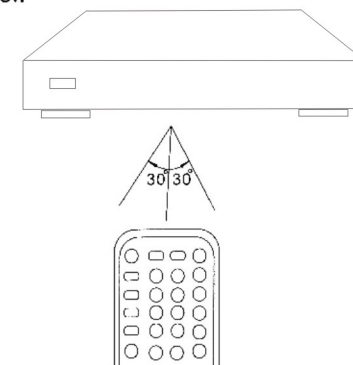

INSTRUCTIONS TO THE REMOTE CONTROL

Distance :within 7m from the front of the remote control sensor.

Angle: within 30° in each direction of the front of the remote sensor.

Do not expose te remote sensorof the DVD video player toa strong light source such as direct sunlight or other illumination. If you doso, you may not be able to operate the DVD video player via the remote control.

Notes on the remote control

1. Direct the remotecontrol at the remote sensor of the DVD video player.
2. Do not drop or give the remote control a shock.
3. Do not drop or give the remote control near an extremely.
4. Do not spill water orany liquid on the remote control.
5. Do not open the remote control.

REMOTE CONTROL OR PANEL KEYS FUNCTIONS

This chapter lists the functions or operations of keys on the remote control. It is intended for the user's speedy. You can refer to the Previous Chapters or the detailed operations Of most keys.

A-B

During the playback, press this button at the point (A) where the repetition will start. Press this button again at the point (B) where the repetition Will end. Then the player the programs between A and B . Press this Button the third time to finish repetition.

PLAY

During the state of stop, pause, slow motion, fast forward or fast reverse etc., Press this button to return to the normal playback.

TITLE / REC

Press this button, the selection menu of the DVD disc will appear. At this moment , use ▲ / ▼ / ◀ / ▶ button to move the selection mark to the desired menu. Then press ENTER button to confirm the selected contents.

(It may be the next sub menu, use ▲ / ▼ / ◀ / ▶ button and ENTER button to operate)

When playing CD, CD+G, MP3G and VCD discs, please press button to start record the content from disc to USB and card as mp3 format. Then press this button again upon finished.

OPEN/CLOSE

Press this Button once to eject the disc tray, press it again to Close the disc Tray. Cycle as this, use this button to load a disc or remove a disc.

REPEAT

As for a DVD disc, press this button to repeat the Current chapter . Press it again to repeat the programs Of the current title. Press It the third time to cancel repetition. As for a SVCD disc (the menu is off), press this button to Repeat the current track. Press it the third time to cancel the repetition.

RETURN

As for a non-DVD disc, when the menu is on, press this button to return to the track list menu during playback.

ZOOM

The Zoom Function allows you to enlarge or zoom out the video image and to pan though the image. Press Zoom repeatedly to activate the function and choose the required zoom factor: Zoom 2,Zoom 3,Zoom 4 Zoom 1/2,Zoom 1/3,Zoom 1/4,Zoom off.

PROGRAM

Press this button to change the playback order. It varies according to the different discs.

REMOTE CONTROL OR PANEL KEYS FUNCTIONS



As for a DVD disc, press it to skip to the next chapter. As for a VCD disc or other disc, press this button to skip to the next track.

ANGLE

 
As for a DVD disc with Multi-angle, Press the button to view the picture from the different angle. Each time when press it, the picture will switch to another angle.

MUTE

Press this button to Let the Analog channel soundless.



Press this button to play fast forward without sounds. Each time when press it, the fast forward speed will change a level. Finally it will return to the normal Playback.

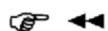

Press this button to play fast backward without sounds. Each time when press it, the fast backward speed Will change a level. Finally it will return to the normal playback.

SLOW

Press this button to play in slow speed without sound. It can play slowly

forward or backward. Each time when press this button, the slow speed will change once. Finally it will return to the normal playback. (only forward for VCD and DVD discs).

PBC

Press this button to switch the menu Mode.

STANDBY

Press this button to turn on or off the player.



As for a DVD disc, press this button to skip to the previous chapter to play, as for a SVCD disc or other disc, press this button to skip to the previous Track.

ENTER

Press this button to make the selection valid.



When the DVD menu or system menu display on the TV screen and wait for selection, press this button to move selection mark to select the desired program.

Number buttons

[0], [1], [2].....[9] is Used for entering the numbers. For example, enter the number of the karaoke songs, the numbers of the DVD chapters and the number of the time.

REMOTE CONTROL OR PANEL KEYS FUNCTIONS

VOCAL

As for a VCD,press this button to select, Mono L, Mono R, stereo etc. Multi output modes. Each time when Press this button it will switch to another channel. Press this button to close the karaoke melody.It varies according To the different discs.

SETUP

Press this button, the SETUP screen will appear and wait for your setting. You can set up according to your needs.

STOP

As for a DVD disc, press this button once and the playback will pause, press this button Again to stop the playback. As for a non-DVD disc, press it once to stop the playback.

LANGUAGE

Press this Button to select the language of the disc. Each time when press it, the volume will increase a volume unit.

V-MODE

Press MODE repeatedly to select S VIDEO or COMPONENT viewing mode.

SUB/COPY

When playing DVD disc with subtitle.press this button to select the subtitle of the disc. When playing CD,CD+G and MP3G discs. press this button to start copy the content from disc to USB and card.

PAUSE

While the player is in the playback mode (include slow, fast forward, fast reverse etc.), Press this button and the playback will pause. The picture will be still. Press It again to return to the normal playback.

STEP

Press this button to play frame by frame. Each Time when press it. The picture will switch to Another one.

VOL+/VOL-

Press VOL- to decrease the volume. Each time when press it, the volume will decrease a volume unit. Press VOL+ to increase the volume. Each time when press it, the volume will increase a volume unit.

P/N

Press this button to switch the system of output signal of the DVD player (PAL or NTSC), Each time when press this button, the system will switch to another one.

REMOTE CONTROL OR PANEL KEYS FUNCTIONS

DISPLAY

Display the disc status information on TV screen.

 
MENU

As for a DVD disc, press this button
To activate the options contained in the disc (valid or not depending on the disc). When the PBC is off, in the stop mode press this button to browse the contents of the disc

SYSTEM SETUP

1. General steps of setup menu

- a) Press the Setup button, the main setup menu appears.
When the main menu displayed, the DVD system will auto pause.

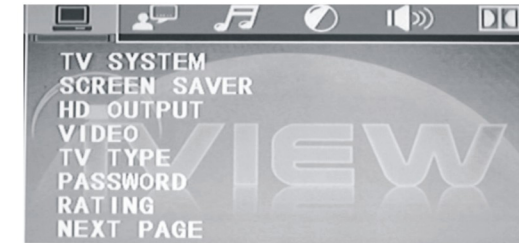

- b) Press the Left and Right arrow buttons to highlight the icon of the desired page, then press the Down or Right arrow button to activate that page; For example, if you want to setup the video page, press Right to highlight the video icon, the video page will be displayed on the screen.



- c) Press the Down arrow button to highlight the desired option. Press Enter or press Right to select, the choices of that option appear on the right; For example, press the Down arrow button to highlight the BRIGHTNESS option, then press Enter to select, the brightness choices appear on the right.

SYSTEM SETUP



d) Press the Arrow buttons to highlight the Exit Setup option, then press Enter or Setup again to exit Setup Menu.

Notes:

When setup, the pressing of the following buttons will turn off the setup menu, while the choices that have been changed will be saved
Subtitle, F.F, F.R, Vol +/-, PBC, Title, Return, Play, Stop, Resume, Pause / Step, Next, Prev, Search, Zoom, Program, Repeat, A-B, Angle, language, Mute, Setup.

2. Setup Items Introduction

a) SYSTEM SETUP

The system setup options are illustrated below:

TV SYSTEM

According to the Color System of the TV, you can choose the TV System.

AUTO: Choose this settings if your DVD player is connected to a multi-system TV.

NTSC: Choose this settings if your DVD player is connected to a NTSC TV.

PAL: Choose this settings if your DVD player is connected to a PAL TV.

The default setting is NTSC.



SYSTEM SETUP

VIDEO

 
Interlace-YUV: Choose this setting if your DVD player is connected to a TV with Y, Cb, Cr video cables.

S-VIDEO: Choose this setting if your DVD player is connected to a TV with an S-Video cable or composite video cables.

P-SCAN: Choose this setting if your DVD player is connected to a progressive scan TV with Y, Cb, Cr video cables.

Notes:

When your DVD player output composite video, you can choose the setting randomly choose S-VIDEO/P-SCAN IF you DVD player is connected to a progressive scan TV

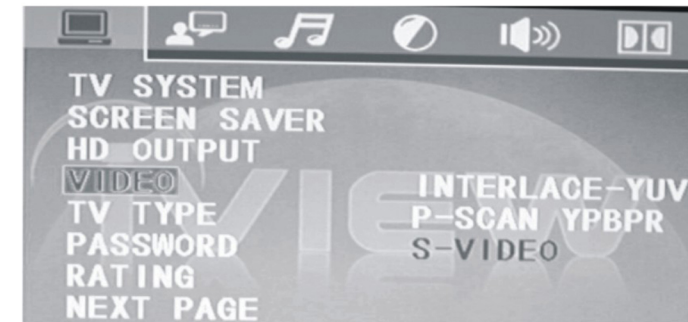

SYSTEM SETUP

TV TYPE

16 : 9 (Wide Screen): Choose this setting if your DVD player is connected to a wide screen TV. If you choose this setting and you don't have a wide screen TV, the images on the screen may appear distorted due to vertical compression.

4 : 3LB (Letter Box): Choosing this setting if your DVD player is connected to a normal ratio TV. You'll see the movies in their original aspect ratio (height-to-width ratio). You'll see the entire frame of the movie, but it will take up a smaller portion of the screen vertically. The movie might appear with black bars at the top and bottom of the screen.


4 : 3PS (Pan & Scan): Choosing this setting if your DVD player is connected to a normal ratio TV. You can fill the movie to the entire screen of your TV. This might mean that parts of the picture (the left and right edges) won't be seen.

Notes:

The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose.

If you play a disc recorded in 4:3 format on a wide screen TV, black bars will appear on the left and right side of the screen.

 
You must adjust the screen setting depending on the type of the television you have.

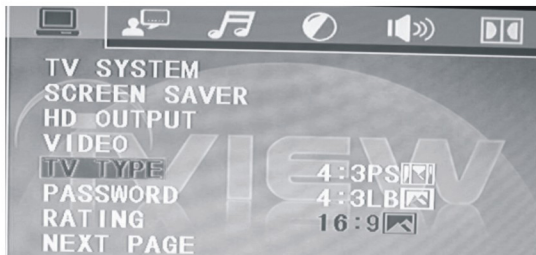

SYSTEM SETUP

PASSWORD

 The password option is initialized locked, and you cannot set the ratings limit or change the password. In order for the Ratings feature work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password, which is 0000, then press Enter to confirm. To change the password, you will be prompted for the old password, then be prompted for a new. Enter a 4-digit number (this is your password).

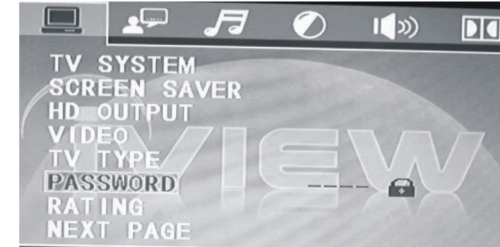


RATING

The Rating feature is a rating limit system, like movie ratings. It works with DVD discs that have been assigned a rating. This helps you control the types of DVDs that your family watches.

Notes:

 
If the password option is locked, you cannot set the ratings limit; the rating limit does not work when the password option is unlocked.

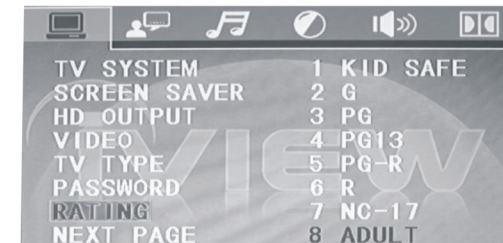

SYSTEM SETUP

RESUME

 When you are playing sameness compact DISC, and press OPEN/CLOSE button, If the resume is ON, press OPEN/CLOSE button again, it will play to the just now.

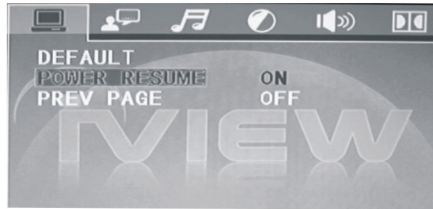

DEFAULT

Choose this option to resume all the setup options to default settings.



b) LANGUAGE SETUP

The language setup options are illustrated below:

OSD LANGUAGE

Highlight the OSD LANGUAGE option, and press the Arrow buttons to choose the OSD language you prefer. Press Enter to confirm, and it will display OSD in that language; There are 5 optional OSD languages:

English, German Spanish, French, Portuguese



SYSTEM SETUP

 
AUDIO LANG

Highlight the AUDIO LANG option, and press the Arrow buttons to choose the audio language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will output audio in that language; There are 8 optional audio languages: Chinese, English, Japan, French, Portuguese, Latin, German.



SUBTITLE LANG

Highlight the SUBTITLE LANG option, and press the Arrow buttons to choose the subtitle language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will displays subtitles in that language; There are 8 optional audio languages: English, German, French, Spanish, Portuguese, Japan, Chinese off.

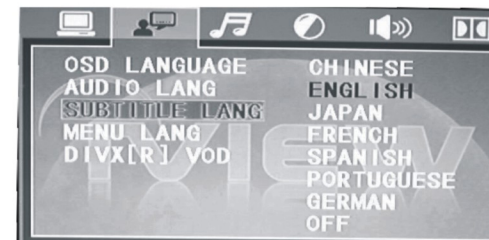

SYSTEM SETUP

MENU LANG

Highlight the MENU LANG option, and press the Arrow buttons to choose the menu language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will display menu in that language; There are 8 optional menu languages: Chinese, English, Japan, French, Spanish, Portuguese, German, Latin.

Notes:

If your preferred language isn't available, the disc's default language will be played.

- The default language of your DVD player is English.

 


C) AUDIO SETUP

The audio setup options are illustrated below:

AUDIO OUT


Highlight the AUDIO OUT option, and press the Arrow buttons to choose the audio output mode you prefer. Press Enter to confirm; There are 3 optional audio output modes: SPDIF/OFF, SPDIF / RAW, and SPDIF/ PCM.

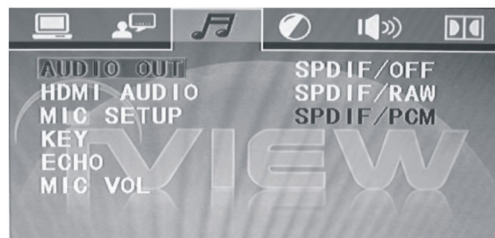

SYSTEM SETUP

KEY

 Use the Up and Down arrow button to move the scroll and adjust the key.

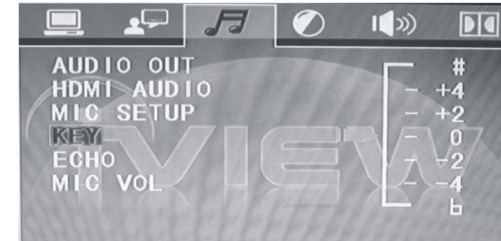

SYSTEM SETUP

d) VIDEO SETUP

The video setup options are illustrated below

BRIGHTNESS

Use the Up and Down arrow button to move the scroll and adjust the brightness.



SYSTEM SETUP

HUE

Use the Up and Down arrow button to move the scroll and adjust the hue.



24

CONTRAST

Use the Up and Down arrow button to move the scroll and adjust the contrast.



25

SATURATION

Use the Up and Down arrow button to move the scroll and adjust the saturation.



SYSTEM SETUP

SHARPNESS

Use the Up and Down arrow button to move the scroll and adjust the sharpness.



e) SPEAKER SETUP(with 5.1 CH model)

The speaker setup options are illustrated below:

DOWNMIX

 
Use the Up and Down arrow button to move the scroll and adjust the saturation.

LT/RT: Choose the key you can see right and left channel

STEREO: Choose this setting, when 5.1-channel sound playing, two channels of signals will be output from the left and right soundtrack; when 2-channel sound playing, stereo signal will be output.

VSS: Choose this setting, when a disc recorded with 5.1-channel sound format playing, the fictitious surround soundtracks effect will be heard from the main soundtrack.


5.1CH: Choose this setting to output the 5.1-channel sound.

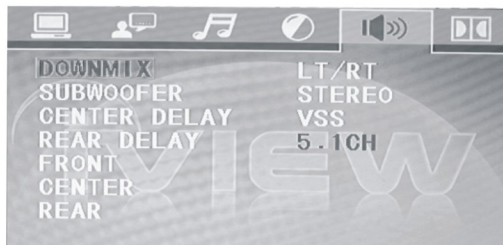

SYSTEM SETUP


SUBWOOFER

 There are two settings in this option: OFF / ON. When ON is chosen, the player will auto detect the subwoofer input then output it. When OFF is chosen and the subwoofer input will not be output.

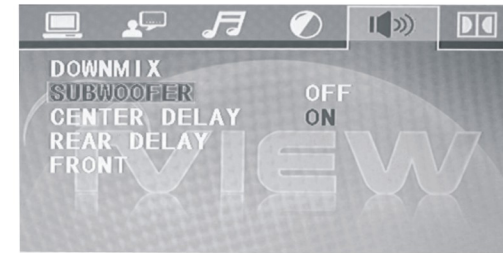

CENTER DELAY

 You can adjust center delay in this option.

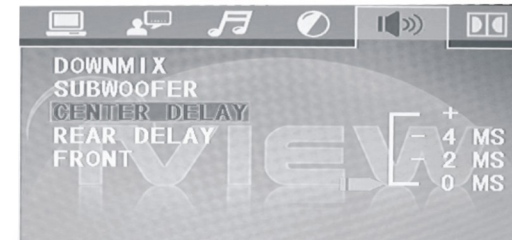

SYSTEM SETUP

REAR DELAY

You can adjust rear delay in this option.



FRONT

You can adjust front in this option.



 
SYSTEM SETUP

f) DIGITAL SETUP

The video setup options are illustrated below:

OP MODE

LINE OUT: Choose this setting to line out the input signal. It will be more suitable for playing in the night time, for the output volume is low. therefore REMOD: It will be more suitable to choose this setting for playing in the day time, for the output volume is high.

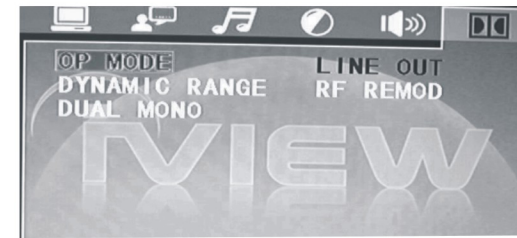

DYNAMIC RANGE :

When LINE OUT is selected, choose this setting to adjust the line out ratio and get different effect. If adjusting to FULL, the audio signal peak value will be the minimum; while adjusting to OFF maximum.

NOTE :

This option will be validated when the DOWNMIX OFF.



SYSTEM SETUP

DUAL MONO(LEFT+RIGHT)

Choose this option to setup the L and R mono output mode; There are four modes in this option: STEREO, MONO L, MONO R, and MIX MONO; It is mainly used in karaoke mode.



30

REFERENCE:

To protect your DVD player, the interval between two consecutive Power button operations must be above 30 seconds.

No using for a period of time, please pull out the plug from the electronic outlet.

The player should be operated only on condition that the type of power supply corresponds to the marking label. Otherwise, it doesn't work or even be damaged.

The player may not be compatible with some encrypted discs.

If the player stops playback by accident, please power it on again.

 
MP3+G FUNCTION :

First you need to save MP3+G files on a USB drive or burn the MP3+G files on a CD or DVD disc. insert USB or Put in the disc to the player.

Use the navigation keys to find the song you want to play and hit the Enter key to play the song.

HDMI CONNECTION

- 1** If your TV has an HDMI input, you can use the HDMI cable to connect the DVD player to the TV. This is the most preferred connection method since it delivers both video and audio in pure digital format via a single cable(*cable not supplied*).
- 2** The HDMI video signals are compatible with the DVI(Digital Visual Interface) format, HDMI jack can be connected to DVI jacks by way of an HDMI-DVI converter.
- 3** User an HDMI-DVI converter cord(not supplied).The DVI jack will not accept any audio signals, so you have to use another audio connection in addition to this connection. Furthermore, you can not connect the HDMI OUT jack to DVI jacks that are not HDCP compliant (e.g., DVI jacks on PC displays)

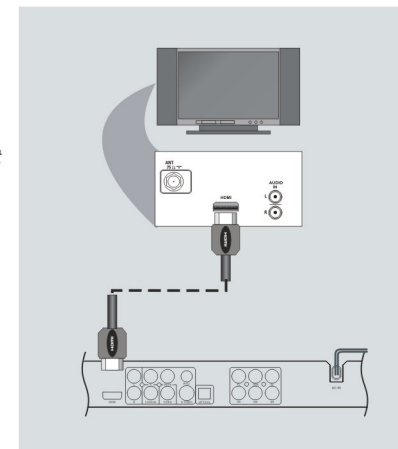

KARAOKE

There are two Karaoke systems, one is for live-on Karaoke, the other one is for record, system modulation as below shows.

- 1** As for live-on Karaoke, please use the button on panel to adjust effects. such as EHCO , DELAY , MIC VOL.
- 2** Please make sure the DVD setup menu when modulating record effectiveness, using DOWN and UP to adjust ECHO effect and record volume, it is not advisable to adjust as which was made ready on assembly line.

Notes:

- 1.The two systems volume can be adjusted by MIC and VOL on the panel meanwhile.*
- 2.Make sure the link of MIC+MUSIC port when Karaoke.*

31

GETTING STARTED

USB mode

Insert USB cable to USB slot on DVD unit.

Press DVD/USB button on the remote to select USB mode, an On Screen Display (OSD) indicator will be displayed on the TV screen in displaying the file information and operation status.



USB cable information

Highlight the desired folder or file and Press ENTER button, the DVD unit will start playback

Multi-playback for USB

For operation details of file, please see "ON SCREEN DISPLAY".

Note:

The unit only supports USB flash disk, don't support USB hard disk.

Card mode

Insert either one of SD, MS, MMC card to the corresponding slot.

Press DVD/USB button on the remote to select Card mode, and On Screen Display (OSD) indicator will be displayed on the TV screen in displaying the file information and operation status.



MS card information

Highlight the desired folder or file and press ENTER button, the DVD unit will start playback. For operation details of JPEG file, please see "ON SCREEN DISPLAY\Kodak Picture CD mode".

SPECIFICATIONS

FEATURES

Supports AVI audio/video formats

Supports various subtitle languages

Full DVD Function

DVD format compatibility: DVD/VCD/CD/CD+G/JPEG/MP3+G

Progressive scan video out

Horizontal resolution more than 500 lines

Audio Outputs: 5.1 CH RCA/Coaxial/Optical

Video Outputs: Video/S-Video/YC

Multi TV System NTSC/PAL

HDMI interface

CONNECTORS

Analogue mixed 2CH stereo (L, R) audio

5.1 CH RCA audio

S/PDIF coaxial digital audio

S/PDIF optical digital audio

Composite video, S-Video

Component video (Y, Cb, Cr)

POWER SUPPLY

Multi-Voltage 90V~240V